



	Отступ при угле																
Высота трубы	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85
10	114	57	37	27	21	17	14	12	10	8	7	6	5	4	3	2	1
15	172	85	56	41	32	26	21	18	15	13	11	9	7	5	4	3	1
20	229	113	75	55	43	35	29	24	20	17	14	12	9	7	5	4	2
25	286	142	93	69	54	43	36	30	25	21	18	14	12	9	7	4	2
30	343	170	112	82	64	52	43	36	30	25	21	17	14	11	8	5	3
35	400	199	131	96	75	61	50	42	35	29	25	20	16	13	9	6	3
40	457	227	149	110	86	69	57	48	40	34	28	23	19	15	11	7	4
45	515	255	168	124	97	78	64	54	45	38	32	26	21	16	12	8	4
50	572	284	187	137	107	87	71	60	50	42	35	29	23	18	13	9	4
60	686	340	224	165	129	104	86	72	60	50	42	35	28	22	16	11	5
70	801	397	261	192	150	121	100	83	70	59	49	40	33	26	19	12	6
80	915	454	299	220	172	139	114	95	80	67	56	46	37	29	21	14	7
90	1029	511	336	247	193	156	129	107	90	76	63	52	42	33	24	16	8
100	1144	567	373	275	215	173	143	119	100	84	70	58	47	36	27	18	9
110	1258	624	411	302	236	191	157	131	110	92	77	64	51	40	30	19	10
120	1372	681	448	330	257	208	171	143	120	101	84	69	56	44	32	21	11
140	1601	794	523	385	300	243	200	167	140	118	98	81	65	51	38	25	12
150	1715	851	560	412	322	260	214	179	150	126	105	87	70	55	40	27	13
160	1830	908	597	440	343	277	229	191	160	134	112	92	75	58	43	28	14
180	2058	1021	672	495	386	312	257	215	180	151	126	104	84	66	48	32	16
190	2173	1078	709	522	408	329	272	227	190	160	133	110	89	69	51	34	17
200	2287	1135	747	550	429	347	286	239	200	168	140	116	93	73	54	35	18